

Quick Threading Needle Information

QUICK THREADING NEEDLE

SERVICEHOUSE




System 705 HDK

- UNIVERSAL NEEDLE with small slip-in threading slot in the eye
- Particularly suitable for easy sliding of sewing thread into the eye
- Needle sizes NM 80 and NM 90



01.08 pd

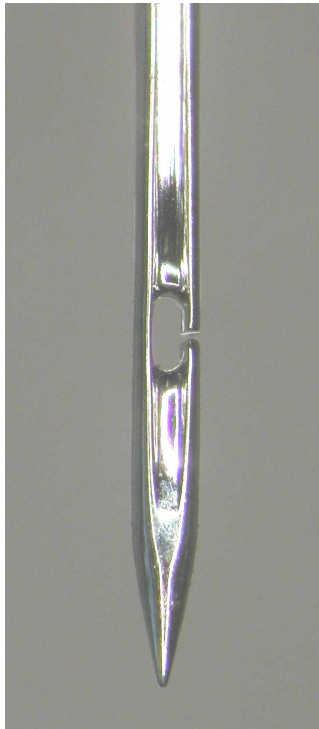

This close-up image illustrates the concept behind the Quick Threading Needle. The Quick Threading Needle is the same as the Universal Needle except for the small threading slot in the eye. This threading slot supports quick and easy threading of the needle. The needle is threaded by drawing the needle thread over the surface of the right side of the needle until it slides into the eye by itself. It is not necessary to change the thread tension. Like the Universal Needle, it can be used for many fabrics.

Please do not use the Quick Threading Needle for sensitive fabrics (i.e., silk, microfibre, etc.) as the slot might create pulled threads. **It should also not be used for quilting as fibers of the batting might be pulled out.**

The thickness of the sewing thread being used should be adapted to the needle size. If the sewing thread is too fine (thin), it might slip out of the needle eye. If the sewing thread is too heavy (thick), it might break frequently.

You may also run into problems if the material is too thick, causing the needle to break. Please remember that the integrity of the Quick Threading Needle is not as strong as a regular Universal Needle due to the cut in the eye.